# SP-000349 rev SP000272 Document CR33.102 95r0-

# 3GPP TSG SA#8 Duesseldorf 26--28.June 2000

e.g. for 3GPP use the format TP-99xxx or for SMG, use the format P-99-xxx

			CHANGE	REQ	UEST	<ul><li>Please : page for</li></ul>		ile at the bottom of this to fill in this form corre	
			33.102	CR	095	R1	Current Version	on: 3.4.0	
GSM (AA.BB) or 3G (AA.BBB) specification number ↑ ↑ CR number as allocated by MCC support team									
For submission	mee	ting # here ↑	for info	approval ormation	X		strate non-strate	gic use on	ly)
Proposed char (at least one should be	nge	affects:	(U)SIM	The lates	X		/ Radio X	rg/Information/CR-Form- Core Network	
Source:		Drafting Gro (H.Dettner,	oup SA#8 A.Howell, M.Wal	ker, I.Sh	arp)		<u>Date:</u>	2000-06-27	
Subject:		Handling of	emergency call						
Work item:		Security							
(only one category shall be marked	A B C	Addition of	modification of fe		rlier rele	ase	Release:	Phase 2 Release 96 Release 97 Release 98 Release 99 Release 00	X
Reason for change:		The handlin	g of emergency	call from	a securi	ty poit of	view is not spe	cified.	
Clauses affected: 6.3.3.2 (New clause)									
Other specs affected:	O M B		cifications		ightarrow List o $ ightarrow$ List o $ ightarrow$ List o $ ightarrow$ List o	of CRs: of CRs: of CRs:	24.008 CRxyz		
Other comments:									
help doc									

<----- double-click here for help and instructions on how to create a CR.

## 6.3.3.2 Emergency calls

Emergency call is a service in the CS domain,

#### 6.3.3.2.1 Valid USIM present

When a valid USIM is present an emergency call will use the normal security mode setup procedure. This means that it is integrity and confidentiality protected in the same way as a normal call.

This means for failure situations:

- for the Network it is an operators choice to continue or not emergency call establishment
- the MS has to abort the emergency call establishment if the integrity check fails.

For further details refer to 24.008 section 4.1.1.1.1

### 6.3.3.2.2 No valid USIM present

Emergency calls may as a serving network option be performed even

- 1. without any (U)SIM present in the UE
- 2. when user authentication fails (USIM present)
- 3. when authentication is impossible to perform (USIM present but network failure or invalid USIM)

In these cases no security mode setup procedure is performed. This means that the call will be conducted without integrity and confidentiality protection.