

CHANGE REQUEST		Please see embedded help file at the bottom of this page for instructions on how to fill in this form correctly.
33.102 CR	Current Version: 3.4.0	
GSM (AA.BB) or 3G (AA.BBB) specification number ↑	↑ CR number as allocated by MCC support team	
For submission to: TSG SA # 8 <small>list expected approval meeting # here ↑</small>	for approval <input checked="" type="checkbox"/> for information <input type="checkbox"/>	strategic <input type="checkbox"/> non-strategic <input type="checkbox"/> <small>(for SMG use only)</small>

Form: CR cover sheet, version 2 for 3GPP and SMG The latest version of this form is available from: <http://ftp.3gpp.org/Information/CR-Form-v2.doc>

Proposed change affects: (U)SIM ME UTRAN / Radio Core Network
(at least one should be marked with an X)

Source: Nokia **Date:** 9. April 2000

Subject: Clarification of BEARER and DIRECTION parameters

Work item:

Category:	F Correction <input checked="" type="checkbox"/> A Corresponds to a correction in an earlier release <input type="checkbox"/> B Addition of feature <input type="checkbox"/> C Functional modification of feature <input type="checkbox"/> D Editorial modification <input type="checkbox"/>	Release:	Phase 2 <input type="checkbox"/> Release 96 <input type="checkbox"/> Release 97 <input type="checkbox"/> Release 98 <input type="checkbox"/> Release 99 <input checked="" type="checkbox"/> Release 00 <input type="checkbox"/>
------------------	--	-----------------	--

(only one category shall be marked with an X)

Reason for change: The BEARER parameter cannot be the logical channel identity because that is not unique for one UE; instead the radio bearer identity must be used. Values for the DIRECTION bit have to be defined.

Clauses affected: 6.5.4.4, 6.6.4.3, 6.6.4.4

Other specs affected:	Other 3G core specifications <input type="checkbox"/> Other GSM core specifications <input type="checkbox"/> MS test specifications <input type="checkbox"/> BSS test specifications <input type="checkbox"/> O&M specifications <input type="checkbox"/>	→ List of CRs: → List of CRs: → List of CRs: → List of CRs: → List of CRs:	
------------------------------	---	--	--

Other comments:



help.doc

<----- double-click here for help and instructions on how to create a CR.

6.5.4 Input parameters to the integrity algorithm

6.5.4.1 COUNT-I

The integrity sequence number COUNT-I is 32 bits long.

There is one COUNT-I value per logical signalling channel.

COUNT-I is composed of two parts: a "short" sequence number and a "long" sequence number. The "short" sequence number is the 4-bit RRC sequence number RRC SN that is available in each RRC PDU. The "long" sequence number is the 28-bit RRC hyperframe number RRC HFN which is incremented at each RRC SN cycle.

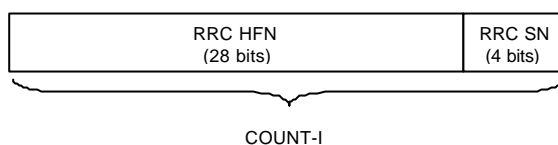


Figure 16a: The structure of COUNT-I

The hyperframe number RRC HFN is initialised by means of the parameter *START*, which is transmitted from UE to RNC during *RRC connection establishment*. The UE and the RNC then initialise the *X* most significant bits of the RRC HFN to *START*; the remaining (28-*X*) LSB of the RRC HFN are initialised to 0. The RRC HFN are incremented independently for each logical channel used for signalling.

Editor's note: The value of *X* still needs to be added.

Editor's note: The description of how *START* is managed in the UE needs to be added.

6.5.4.2 IK

The integrity key IK is 128 bits long.

There may be one IK for CS connections (IK_{CS}), established between the CS service domain and the user and one IK for PS connections (IK_{PS}) established between the PS service domain and the user. Which integrity key to use for a particular connection is described in 6.5.6.

For UMTS subscribers IK is established during UMTS AKA as the output of the integrity key derivation function f_4 , that is available in the USIM and in the HLR/AuC. For GSM subscribers, that access the UTRAN, IK is established following GSM AKA and is derived from the GSM cipher key K_c , as described in 6.8.2.

IK is stored in the USIM and a copy is stored in the UE. IK is sent from the USIM to the UE upon request of the UE. The USIM shall send IK under the condition that 1) a valid IK is available, 2) the current value of *START* in the USIM is up-to-date and 3) *START* has not reached *THRESHOLD*. The UE shall delete IK from memory after power-off as well as after removal of the USIM.

IK is sent from the HLR/AuC to the VLR or SGSN and stored in the VLR or SGSN as part of a quintet. It is sent from the VLR or SGSN to the RNC in the (RANAP) *security mode command*. The MSC/VLR or SGSN shall assure that the IK is updated at least once every 24 hours.

At handover, the IK is transmitted within the network infrastructure from the old RNC to the new RNC, to enable the communication to proceed, and the synchronisation procedure is resumed. The IK remains unchanged at handover.

6.5.4.3 FRESH

The network-side nonce FRESH is 32 bits long.

There is one FRESH parameter value per user. The input parameter FRESH protects the network against replay of signalling messages by the user. At connection set-up the RNC generates a random value FRESH and sends it to the user in the (RRC) *security mode command*. The value FRESH is subsequently used by both the network and the user throughout the duration of a single connection. This mechanism assures the network that the user is not replaying any

old MAC-Is.

At handover with relocation of the S-RNC, the new S-RNC generates its own value for the FRESH parameter and sends it in a new *security mode command* to the user.

6.5.4.4 DIRECTION

The direction identifier DIRECTION is 1 bit long.

The direction identifier is input to avoid that for the integrity algorithm used to compute the message authentication codes would use an identical set of input parameter values for the up-link and for the down-link messages. The value of the DIRECTION is 0 for messages from UE to RNC and 1 for messages from RNC to UE.

6.5.4.5 MESSAGE

The signalling message itself.

6.5.5 Integrity key selection

There may be one IK for CS connections (IK_{CS}), established between the CS service domain and the user and one IK for PS connections (IK_{PS}) established between the PS service domain and the user.

The data integrity of logical channels for user data is not protected.

Signalling data for services delivered by either of both service domains is sent over common logical (signalling) channels. These logical channels are data integrity protected by the IK of the service domain for which the most recent security mode negotiation took place. This may require that the integrity key of an (already integrity protected) ongoing signalling connection has to be changed, when a new RRC connection is established (with another service domain), or when a security mode negotiation follows a re-authentication during an ongoing connection. This change should be completed within five seconds after the security mode negotiation.

6.5.6 UIA identification

Each UMTS Integrity Algorithm (UIA) will be assigned a 4-bit identifier. Currently, the following values have been defined:

"0001₂" : UIA1, Kasumi.

The remaining values are not defined.

6.6 Access link data confidentiality

6.6.1 General

User data and some signalling information elements are considered sensitive and must be confidentiality protected. To ensure identity confidentiality (see section 6.1), the temporary user identity (P-)TMSI must be transferred in a protected mode at allocation time and at other times when the signalling procedures permit it.

These needs for a protected mode of transmission are fulfilled by a confidentiality function which is applied on dedicated channels between the UE and the RNC.

6.6.2 Layer of ciphering

The ciphering function is performed either in the RLC sub-layer or in the MAC sub-layer, according to the following rules:

- If a logical channel is expected to be supported on a common transport channel and has to be ciphered, it shall use UM RLC mode and ciphering is performed at the RLC sub-layer.
- If a logical channel is using a non-transparent RLC mode (AM or UM), ciphering is performed in the RLC sub-

layer.

- If a logical channel is using the transparent RLC mode, ciphering is performed in the MAC sub-layer (MAC-d entity).

Ciphering when applied is performed in the S-RNC and the UE and the context needed for ciphering (CK, HFN, etc.) is only known in S-RNC and the UE.

6.6.3 Ciphering method

Figure 16b illustrates the use of the ciphering algorithm f8 to encrypt plaintext by applying a keystream using a bit per bit binary addition of the plaintext and the ciphertext. The plaintext may be recovered by generating the same keystream using the same input parameters and applying a bit per bit binary addition with the ciphertext.

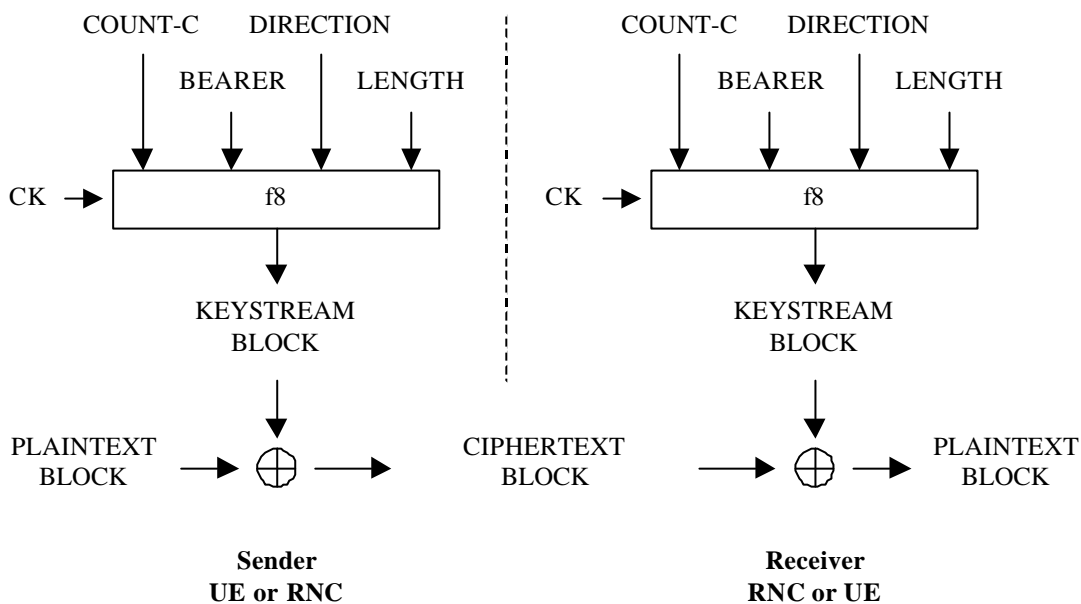


Figure 16b: Ciphering of user and signalling data transmitted over the radio access link

The input parameters to the algorithm are the cipher key CK, a time dependent input COUNT-C, the bearer identity BEARER, the direction of transmission DIRECTION and the length of the keystream required LENGTH. Based on these input parameters the algorithm generates the output keystream block KEYSTREAM which is used to encrypt the input plaintext block PLAINTEXT to produce the output ciphertext block CIPHERTEXT.

The input parameter LENGTH shall affect only the length of the KEYSTREAM BLOCK, not the actual bits in it.

6.6.4 Input parameters to the cipher algorithm

6.6.4.1 COUNT-C

The ciphering sequence number COUNT-C is 32 bits long.

There is one COUNT-C value per logical RLC AM channel, one per logical RLC UM channel and one for all logical channels using the transparent RLC mode (and mapped onto DCH).

COUNT-C is composed of two parts: a "short" sequence number and a "long" sequence number. The update of COUNT-C depends on the transmission mode as described below (see figure 16c).

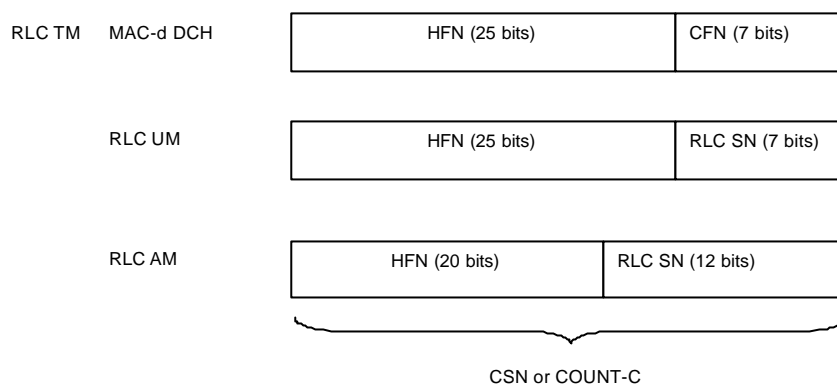


Figure 16c: The structure of COUNT-C for all transmission modes

- For RLC TM on DCH, the "short" sequence number is the 7-bit ciphering frame number CFN of the UEFN. It is independently maintained in the UE MAC entity and the SRNC MAC-d entity. The "long" sequence number is the 25-bit MAC HFN which is incremented at each CFN cycle. The ciphering sequence number CSN or COUNT-C is identical to the UEFN.
- For RLC UM mode, the "short" sequence number is the 7-bit RLC sequence number RLC SN that is available in each RLC PDU (it is not ciphered). The "long" sequence number is the 25-bit RLC HFN which is incremented at each RLC SN cycle.
- For RLC AM mode, the "short" sequence number is the 12-bit RLC sequence number RLC SN that is available in each RLC PDU (it is not ciphered). The "long" sequence number is the 20-bit RLC HFN which is incremented at each RLC SN cycle.

The hyperframe number HFN is initialised by means of the parameter *START*, which is transmitted from UE to RNC in *RRC connection establishment*. The UE and the RNC then initialise the *X* most significant bits of the RLC HFN and MAC HFN to *START*; the remaining LSB of the RLC HFN and MAC HFN are initialised to 0. The RRC HFN are incremented independently for each logical channel.

Editor's note: The value of *X* still needs to be decided.

Editor's note: The description of how *START* is managed in the UE needs to be added.

6.6.4.2 CK

The cipher key CK is 128 bits long.

There may be one CK for CS connections (CK_{CS}), established between the CS service domain and the user and one CK for PS connections (CK_{PS}) established between the PS service domain and the user. Which cipher key to use for a particular logical channel is described in 6.6.6. For UMTS subscribers, CK is established during UMTS AKA, as the output of the cipher key derivation function f_3 , available in the USIM and in HLR/AuC. For GSM subscribers that access the UTRAN, CK is established following GSM AKA and is derived from the GSM cipher key K_c , as described in 8.2.

CK is stored in the USIM and a copy is stored in the UE. CK is sent from the USIM to the UE upon request of the UE. The USIM shall send CK under the condition that 1) a valid CK is available, 2) the current value of *START* in the USIM is up-to-date and 3) *START* has not reached *THRESHOLD*. The UE shall delete CK from memory after power-off as well as after removal of the USIM.

CK is sent from the HLR/AuC to the VLR or SGSN and stored in the VLR or SGSN as part of the quintet. It is sent from the VLR or SGSN to the RNC in the (RANAP) security mode command. The VLR or SGSN shall assure that CK is updated at least once every 24 hours.

At handover, the CK is transmitted within the network infrastructure from the old RNC to the new RNC, to enable the communication to proceed. The cipher CK remains unchanged at handover.

6.6.4.3 BEARER

The ~~radio bearer~~~~logical channel~~ identifier BEARER is 54 bits long.

There is one BEARER parameter per ~~radio bearer~~~~logical channel~~ associated with the same user and multiplexed on a single 10ms physical layer frame. The ~~radio bearer~~~~logical channel~~ identifier is input to avoid that for different keystream an identical set of input parameter values is used.

6.6.4.4 DIRECTION

The direction identifier DIRECTION is 1 bit long.

The direction identifier is input to avoid that for the keystreams for the up-link and for the down-link would use the an identical set of input parameter values. The value of the DIRECTION is 0 for messages from UE to RNC and 1 for messages from RNC to UE.