

<h2 style="margin: 0;">CHANGE REQUEST</h2>				<i>Please see embedded help file at the bottom of this page for instructions on how to fill in this form correctly.</i>	
33.102		CR	052		Current Version: 3.3.1
GSM (AA.BB) or 3G (AA.BBB) specification number ↑			↑ CR number as allocated by MCC support team		
For submission to:	SA #7	for approval for information	<input checked="" type="checkbox"/>		strategic <input type="checkbox"/>
list expected approval meeting # here ↑			<input type="checkbox"/>		(for SMG use only)

Form: CR cover sheet, version 2 for 3GPP and SMG The latest version of this form is available from: <ftp://ftp.3gpp.org/Information/CR-Form-v2.doc>

Proposed change affects: (U)SIM ME UTRAN / Radio Core Network
(at least one should be marked with an X)

Source: Ericsson **Date:** 2000-02-16

Subject: Trigger points of AFR during AKA

Work item: Security

Category:	F Correction <input checked="" type="checkbox"/> A Corresponds to a correction in an earlier release <input type="checkbox"/> B Addition of feature <input type="checkbox"/> C Functional modification of feature <input type="checkbox"/> D Editorial modification <input type="checkbox"/>	Release:	Phase 2 <input type="checkbox"/> Release 96 <input type="checkbox"/> Release 97 <input type="checkbox"/> Release 98 <input type="checkbox"/> Release 99 <input checked="" type="checkbox"/> Release 00 <input type="checkbox"/>
------------------	--	-----------------	--

(only one category shall be marked with an X)

Reason for change:

Points where Authentication Failure report mechanism towards HLR is triggered are specified within the AKA procedure.

Details on f1* function have been removed.

Term 'SN/VLR' has been replaced by 'VLR/SGSN'.

Clauses affected: 6.3.3

Other specs affected:	Other 3G core specifications <input type="checkbox"/> Other GSM core specifications <input type="checkbox"/> MS test specifications <input type="checkbox"/> BSS test specifications <input type="checkbox"/> O&M specifications <input type="checkbox"/>	→ List of CRs: → List of CRs: → List of CRs: → List of CRs: → List of CRs:
------------------------------	---	--

Other comments:



<----- double-click here for help and instructions on how to create a CR.

6.3.3 Authentication and key agreement

The purpose of this procedure is to authenticate the user and establish a new pair of cipher and integrity keys between the VLR/SGSN and the MS. During the authentication, the user verifies the freshness of the authentication vector that is used.

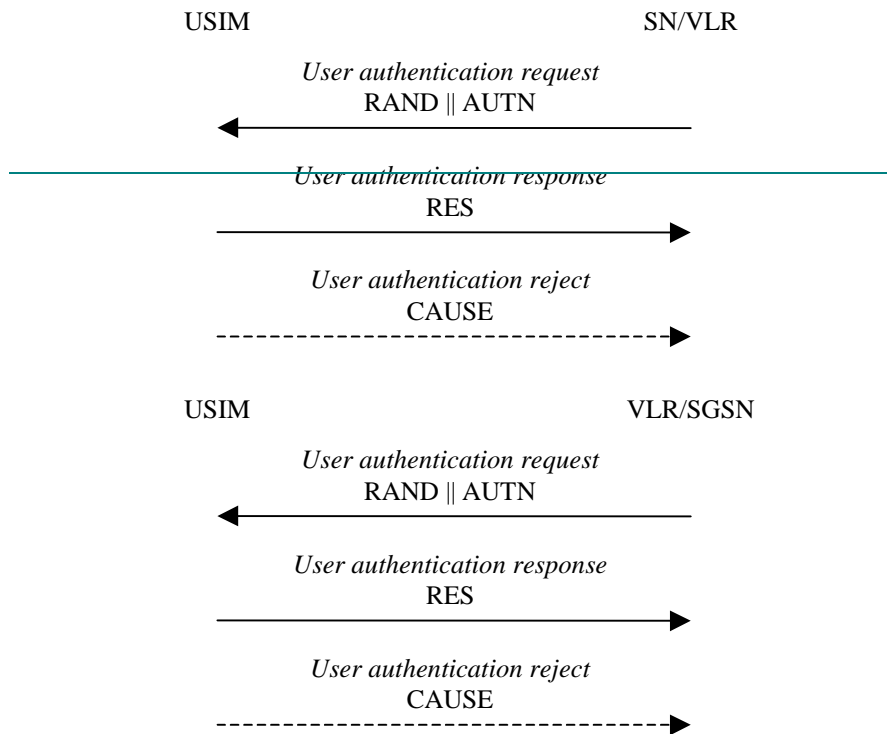


Figure 8: Authentication and key establishment

The VLR/SGSN invokes the procedure by selecting the next unused authentication vector from the ordered array of authentication vectors in the VLR/SGSN database. The VLR/SGSN sends to the user the random challenge $RAND$ and an authentication token for network authentication $AUTN$ from the selected authentication vector.

Upon receipt the user proceeds as shown in Figure 9.

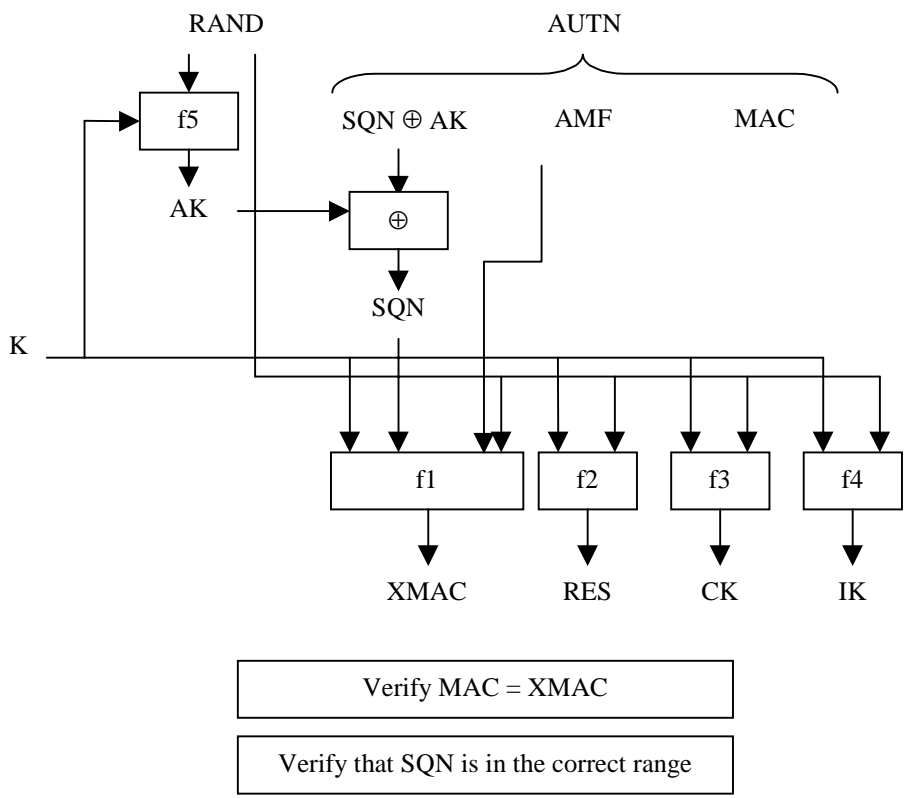


Figure 9: User authentication function in the USIM

Upon receipt of $RAND$ and $AUTN$ the user first computes the anonymity key $AK = f5_K (RAND)$ and retrieves the sequence number $SQN = (SQN \oplus AK) \oplus AK$.

Next the user computes $XMAC = f1_K (SQN \parallel RAND \parallel AMF)$ and compares this with MAC which is included in $AUTN$. If they are different, the user sends *user authentication reject* back to the VLR/SGSN with an indication of the cause and the user abandons the procedure. [In this case, VLR/SGSN may decide to initiate a new identification and authentication procedure towards the user. VLR/SGSN may also initiate an Authentication Failure Report procedure towards the HLR as specified in section 6.3.6.](#)

Next the USIM verifies that the received sequence number SQN is in the correct range.

If the user considers the sequence number to be not in the correct range, he sends *synchronisation failure* back to the VLR/SGSN including an appropriate parameter, and abandons the procedure.

The synchronisation failure message contains the parameter $AUTS$. It is $AUTS = Conc(SQN_{MS}) \parallel MACS$. $Conc(SQN_{MS}) = SQN_{MS} \oplus f5_K (MACS)$ is the concealed value of the counter SEQ_{MS} in the MS, and $MACS = f1^*_K (SEQ_{MS} \parallel RAND \parallel AMF)$ where $RAND$ is the random value received in the current user authentication request. $f1^*$ is a message authentication code (MAC) function ~~with the property that no valuable information can be inferred from the function values of $f1^*$ about those of $f1, \dots, f5$ and vice versa.~~

The AMF used to calculate $MACS$ assumes a dummy value of all zeros so that it does not need to be transmitted in the clear in the re-synch message.

The construction of the parameter $AUTS$ is shown in the following Figure 10:

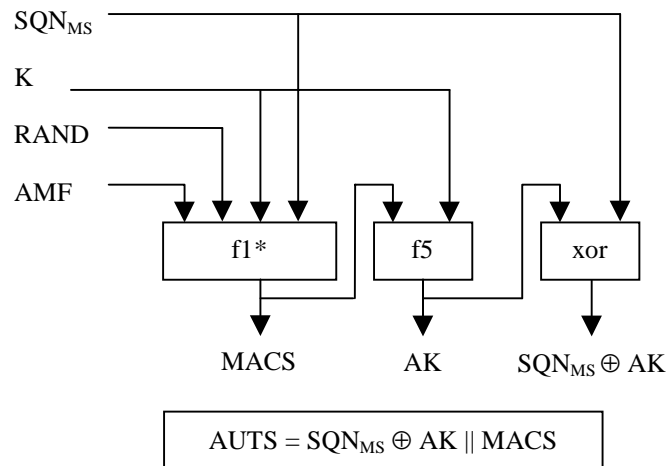


Figure 10: Construction of the parameter AUTS

If the sequence number is considered to be in the correct range however, the user computes $RES = f2_K(RAND)$ and includes this parameter in a *user authentication response* back to the VLR/SGSN. Finally the user computes the cipher key $CK = f3_K(RAND)$ and the integrity key $IK = f4_K(RAND)$. Note that if this is more efficient, RES , CK and IK could also be computed earlier at any time after receiving $RAND$. The MS stores $RAND$ for re-synchronisation purposes.

Upon receipt of *user authentication response* the VLR/SGSN compares RES with the expected response $XRES$ from the selected authentication vector. If $XRES$ equals RES then the authentication of the user has passed. The VLR/SGSN also selects the appropriate cipher key CK and integrity key IK from the selected authentication vector. If they are different, VLR/SGSN may decide to initiate a new identification and authentication procedure towards the user. VLR/SGSN may also initiate an Authentication Failure Report procedure towards the HLR as specified in section 6.3.6.